

# SIM800 Series\_ Embedded AT\_ Sleep\_Application Note

**GPRS Module** 

#### SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633, Jinzhong Road
Changning District, Shanghai P.R. China
Tel: 86-21-31575100
support@simcom.com
www.simcom.com



Document Title:	SIM800 Series_Embedded AT_Sleep_Application Note	
Version:	1.03	
Date:	2020.6.15	
Status:	Released	

#### **GENERAL NOTES**

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

### COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION , INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT, A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

#### SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633 Jinzhong Road, Changning District, Shanghai P.R. China

Tel: +86 21 31575100

Email: simcom@simcom.com

#### For more information, please visit:

https://www.simcom.com/download/list-863-en.html

## For technical support, or to report documentation errors, please visit:

https://www.simcom.com/ask/ or email to: support@simcom.com

Copyright © 2020 SIMCom Wireless Solutions Limited All Rights Reserved.

www.simcom.com 2/9



# **About Document**

# **Version History**

Version	Date	Owner	What is new
V1.00	2012.10.10	Bin Mao	New version
V1.01	2015.02.10	Bin Mao	Update scope of application
V1.02	2015.08.10	Bin Mao	Add SIM800C
V1.03	2020.06.15	Fan.Fang	All

## Scope

This document is applicable to SIM800 series Embedded AT module, include SIM800W, SIM800W, SIM800W, SIM800H, SIM800, SIM800M64, SIM808 and SIM800C.

This document presents the operations and notes of Sleep mode for Embedded AT.

www.simcom.com 3/9



# **Contents**

Ab	out D	ocument	3		
	Version	on History	3		
		÷			
0-					
Co	ntent	S	4		
1	Interface				
		p Mode			
		Sleep Mode Setting			
	2.2	Wake Up from Sleep Mode	6		
	2.3	Current Consumption in Sleep Mode	7		
		Serial Port Status in Sleep Mode			



# 1 Interface

extern eat\_bool (\*const eat\_sleep\_enable)(eat\_bool en);

www.simcom.com 5/9



# 2 Sleep Mode

## 2.1 Sleep Mode Setting

The parameter eat\_sleep\_enable is used to set whether the system can enter sleep mode. When the value of eat\_sleep\_enable is EAT\_TRUE, the system is allowed to enter sleep mode. When the value of eat\_sleep\_enable is EAT\_FALSE, getting into sleep mode is forbidden.

#### Notes:

- ➤ Ensure backlight has been turned off before setting sleep mode parameter. If the state of backlight is open, the system can't enter sleep mode. The parameters used to set backlight state are eat\_lcd\_light\_sw and eat\_kpled\_sw. When the values of eat\_lcd\_light\_sw and eat\_kpled\_sw are both KAL\_TURE, the backlight state is open and the system does not enter sleep mode. When the values of eat\_lcd\_light\_sw and eat\_kpled\_sw are both KAL\_FALSE, the backlight is turned off, then the system can be set to enter sleep mode.
- ➤ When USB(SIM800V,SIM800W or SIM840W without USB) insert or VCHG PIN has power supply (4.4V~7V), the system can't enter sleep mode.
- After being allowed to enter sleep mode, the system may not start to sleep immediately. Before enter sleep mode, the system must check current network state and executing states of other tasks. Only when the system is free, it can enter sleep mode. If the system is busy, it will wait for all tasks finished before enter sleep mode. For example: if a sleep command is sponsored during a call, system will get into sleep until the call finished.

# 2.2 Wake Up from Sleep Mode

When the module is in sleep mode, only specified actions can wake it up. The specified actions are listed in the following table. They are coming call, coming SMS, timer time-out, keying and GPIO interrupt. No more actions can wake the module up from sleep mode.

After woken up, it does not mean the module has left sleep mode. When the system is free again (no air data, no UART data), the module will go back to sleep mode again. So if module was woken up and need to leave sleep mode, customer must set sleep mode parameter actively to forbid module enter sleep mode

www.simcom.com 6/9



again. That is to say, the value of eat\_sleep\_enable must be set to EAT\_FALSE if customer wants module to leave sleep mode after it was woken up by some reasons.

Wake Up Reason	Report Message	Related Information
Coming Call	EAT_EVENT_MDM_READY_RD	Report "\r\nRING\r\n"
Coming SMS	EAT_EVENT_MDM_READY_RD	Report "\r\n+CMTI: xxx\r\n"
Timer Time-out	EAT_EVENT_TIMER	event.data.timer.timer_id
Keying	EAT_EVENT_KEY	event.data.key
GPIO Interrupt	EAT_EVENT_INT	event.data. interrupt
USB plug in	Will call eat_usb_eint_callback_func	Hardware wakeup(SIM800V,SIM800W
		or SIM840W have no USB interface)
VCHG in(4.4V~7V)	No	Hardware wakeup

- When module is woken up by Coming Call and Coming SMS: system will report EAT\_EVENT\_MDM\_READY\_RD message and related AT command data. Interface function eat\_modem\_read(buf, len) will be used to obtain message parameters' values.
- When module is woken up by timer: system will report EAT\_EVENT\_TIMER message, and the timer's ID will be contained in the message's parameter event.
- When module is woken up by keying: system will report AT\_EVENT\_KEY message, and the key's value and status will be contained in the message's parameter event.
- When module is woken up by GPIO interrupt: system will report EAT\_EVENT\_INT message, and the pin's value and status will be contained in the message's parameter event.
- The callback fuction will be called if USB (SIM800V,SIM800W or SIM840W without USB) insert and register callback function using eat\_usb\_eint\_register.
- > If VCHG PIN has power supply, module will be woken up automatically and no messages reported.

## 2.3 Current Consumption in Sleep Mode

In sleep mode, the current will be less than 1mA.

When the module is in sleep mode, it can be woken up by itself periodically in order to communicate with the network. This action is automatic and customer does not need to do anything. The automatic wake-up time is about tens of milliseconds which is short-lived. If the automatic wake-up time is out, the module will enter sleep mode again.

The consumption of current in sleep mode is present in the following figure 1.

www.simcom.com 7/9

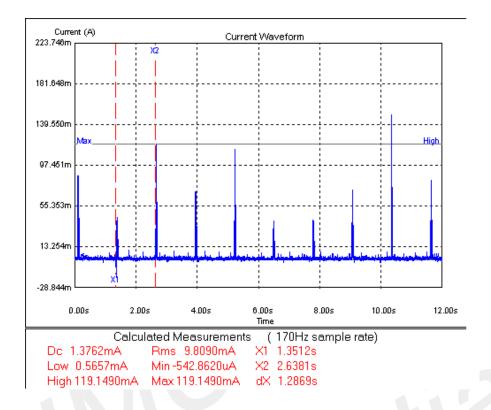


Figure 1 Consumption current of module in sleep mode

The following figure 2 is the partial enlarged view of figure 1.

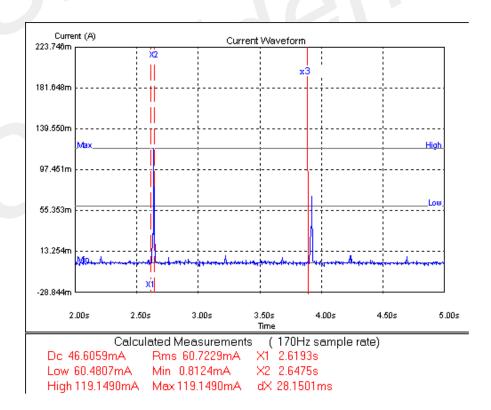


Figure 2 Partial enlarged view of module's consumption current in sleep mode

www.simcom.com 8/9



## 2.4 Serial Port Status in Sleep Mode

In sleep mode, serial port will not work. So the module does not be woken up by transmitting data through serial port.

During the period of automatic wake-up time, module can receive data as normal. For example, during the time from x1 to x2 showed in figure 2, module can receive data from serial port. As mentioned in chapter 2.3, this period is just tens of milliseconds. If customer transmits data through serial port during this short period, data received by module may be incomplete. It is impossible to ensure data integrity if transmitting occurs during automatic wake-up time. In figure 2, during the time between x2 and x3, module is in sleep mode and can't communicate through serial port.

If serial port needs to be used, there are 3 methods available. Customer can take the related method according to different conditions. For example: if serial port was used to transport AT command, the first method is the right one to take. While if serial port was used by APP, the second and third methods can both work. Below is the detail of the three methods.

- Sending "AT+CSCLK=0\r\n" continuously: If serial port is used to send AT command when the module is in sleep mode, sends "AT+CSCLK=1\r\n" before setting "eat\_sleep\_enable(EAT\_TRUE)". After setting "eat\_sleep\_enable(EAT\_TRUE)", customer can send "AT+CSCLK=0\r\n" continuously. When the module responses "OK", it means serial port can be used to transmit AT command as normal and quit from sleep mode (will never go back to sleep mode automatically). If wants to the module entry sleep mode, sends "AT+CSCLK=1\r\n" again.
- Sending specified data continuously: In sleep mode, if serial port was used by APP, the APP will search specified data in data received from serial port. So, when peripherals need to send data through serial port, it should firstly send specified data continuously. After the APP receives and recognizes the specified data, it will call interface function eat\_sleep\_enable to forbid system to enter sleep mode again. In the same time, the APP will return response data to serial port. Then the peripheral can start to send data after receiving response data from APP.
- Using external interrupt pins: When serial port needs to be used to send data in sleep mode, customer can give a high or low level to an interrupt pin of the module. After APP receives the interrupt signal, it will decide whether to forbid system to enter sleep mode again based on the level of the pin. Then the APP will call the interface function eat\_sleep\_enable() to realize the action of forbidding or allowing system to enter sleep mode again.

www.simcom.com 9/9